



Keep Your Boat Safe From Wind Damage

Use of correct mooring lines of 3/8" line, snubbers and most importantly **SPRING LINES** will prevent wind damage, as well as proper use of **FENDERS**.

HOW TO TIE A MOORING LINE TO A CLEAT

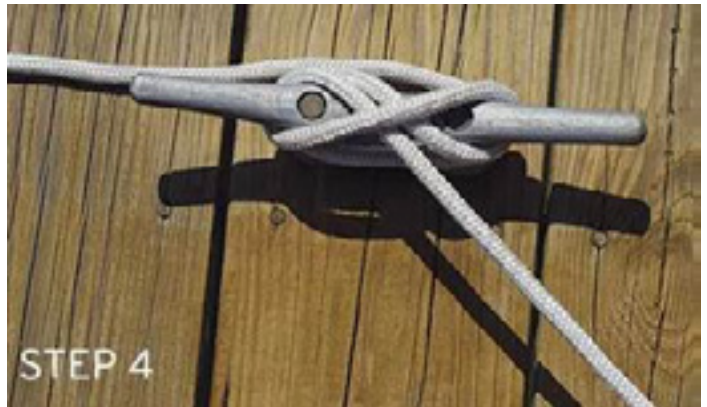

HOW TO TIE A MOORING LINE TO A CLEAT

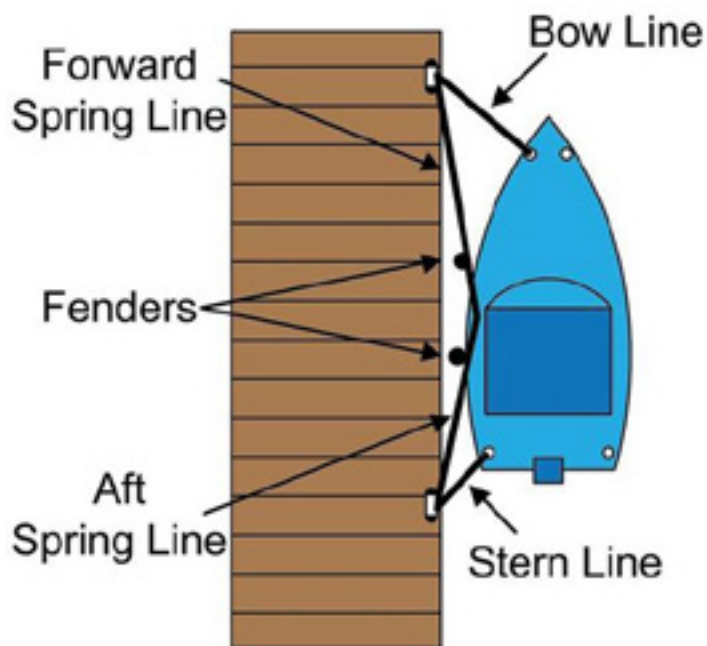

Other Tips:

- Be sure that your fenders are properly sized
- Make sure they are inflated
- Invest in a good brand of fenders (Taylor Brand have a lifetime guarantee - they will replace them if they deflate).